

# Petit 330


Pouch laminator

Laminiergerät

Plastifieuse

Plastificadora

1. Power Switch
2. Power Light
3. Ready Light
4. Jam Release Lever
5. Entry
6. Exit

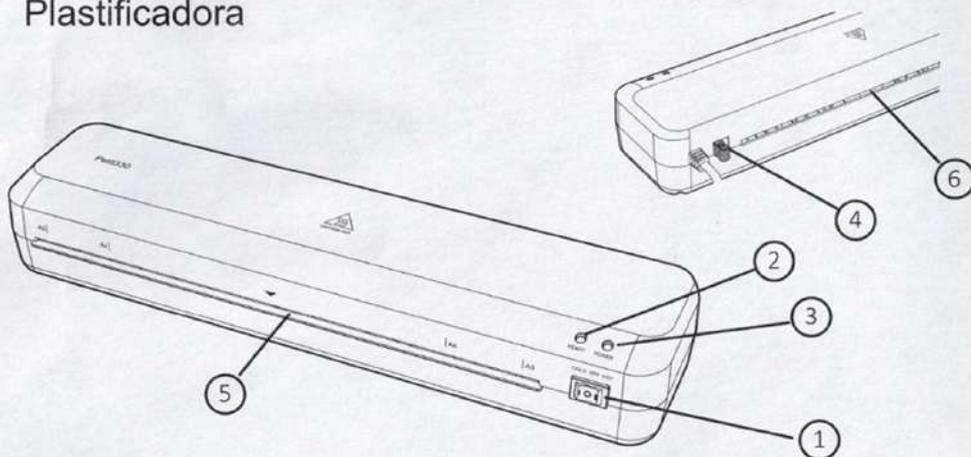

## Please read and keep these important safety instructions


- Only use this unit for its intended purpose of laminating paper-based documents / photos.
- The unit must only be connected to a supply voltage corresponding to the electrical rating shown on the unit.
- Unit should be connected to a socket outlet near the equipment that is easily accessible.
- Do not connect to multiple adaptors or use with an extension cable.
- Ensure no lamination runs through with metal objects like staples, paper clips.
- Do not laminate an empty pouch.
- Ensure laminating material in proper size against the pouch used.
- Remove finished lamination from the unit before starting the next pouch.
- Use pouches required for the appropriate pouch setting.
- Start lamination only when the corresponding LED light does not keep blinking.
- Do not use a carrier with this machine.
- Do not attempt to service or repair the unit yourself.
- In the event of a fault, unplug the unit and contact an authorized service representative for any required repairs.
- Do not use the unit if the cable or plug has been damaged.
- Turn off the unit after each use.
- Failure to follow these instructions could result in damage / injury and will invalidate your guarantee.

CE


**Specifications/Technical data**  
(subject to change without prior notice)

	Petit 330 -EU	Petit 330-US
Max. laminating width	330 mm	13 "
Laminating pouch thickness	Cold,75-125mic	Cold,3-5mil
Laminating speed	300 mm per min.	12" per min.
Pouch jam recovery	Yes	Yes
Warm-up time	3 minutes 30 seconds	3 minutes 30 seconds
Power	230/50HZ, 280W	120V/60HZ, 280W
Dimensions	425 x 116 x 65.5mm	16.7" x 4-7/16" x 2-1/2"
Net weight	1.1kg	2.4lbs


**Operation:**

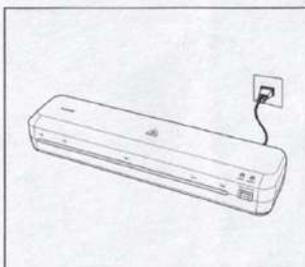


Step 1: Connect the power plug to the power supply

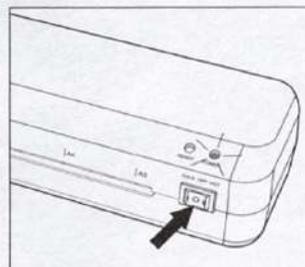


Step 2: Turn the **Power Switch** to **HOT** and the **Power Light** is on

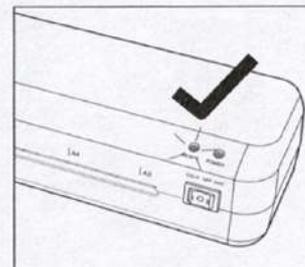


Step 3: Wait 210 seconds for the **Ready Light** to turn green.

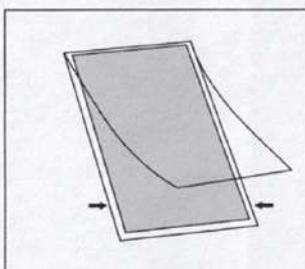

Step 4: Open the laminating film and place the document in the centre of the film

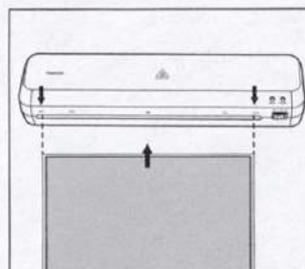

Step 5: Place the laminating film into the **Entry** of the machine

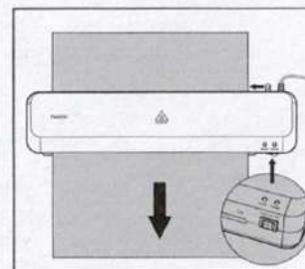

Step 6: When a film jam occurs, please turn off the **Power Switch**. Push the **Jam Release Lever** to the other side with one hand and pull the film out with the other hand.